

COMPLIANCE INFORMATION

UL Listed
C-UL Listed (Canada)
CISPR/EN55022 Class A

FCC Regulations

This equipment has been tested and found to comply with the limits for a class A digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at the user's own expense.

Canadian Regulations

This digital apparatus does not exceed the Class A limits for radio noise for digital apparatus set out on the radio interference regulations of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la class A prescrites dans le Règlement sur le brouillage radioélectrique édicté par le ministère des Communications du Canada.

European Regulations

Warning

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Achtung !

Dieses ist ein Gerät der Funkstörgrenzwertklasse A. In Wohnbereichen können bei Betrieb dieses Gerätes Rundfunkstörungen auftreten, in welchen Fällen der Benutzer für entsprechende Gegenmaßnahmen verantwortlich ist.

Attention !

Ceci est un produit de Classe A. Dans un environnement domestique, ce produit risque de créer des interférences radioélectriques, il appartiendra alors à l'utilisateur de prendre les mesures spécifiques appropriées



CAUTION: RJ connectors are NOT INTENDED FOR CONNECTION TO THE PUBLIC TELEPHONE NETWORK. Failure to observe this caution could result in damage to the public telephone network.

Der Anschluss dieses Gerätes an ein öffentliches Telekommunikationsnetz in den EG-Mitgliedstaaten verstößt gegen die jeweiligen einzelstaatlichen Gesetze zur Anwendung der Richtlinie 91/263/EWG zur Angleichung der Rechtsvorschriften der Mitgliedstaaten über Telekommunikationsendeinrichtungen einschliesslich der gegenseitigen Anerkennung ihrer Konformität.

Trademark Notice

All registered trademarks and trademarks are the property of their respective owners.

Copyright Restrictions

© 1999 TRANSITION Networks.

All rights reserved. No part of this work may be reproduced or used in any form or by any means – graphic, electronic, or mechanical – without written permission from TRANSITION Networks.

Printed in the U.S.A.

33114.A



Minneapolis, MN 55344 USA


RS-232 Serial-Port Fiber Extension

Media Converters

RS232-CF-01

USER'S GUIDE

The TRANSITION Networks RS232-CF-01 RS-232 serial-port fiber extension media converters extend distances between Data Terminal Equipment (DTE) and Data Channel Equipment (DCE) OR between Data Terminal Equipment (DTE) and Data Terminal Equipment (DTE) up to two (2) kilometers over *multimode* fiber (62.5/125) @ 850 nM.

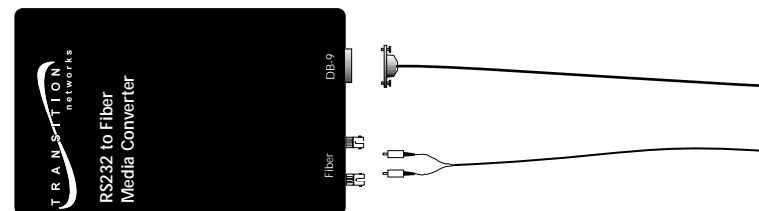

RS232-CF-01


Provides one (1) DB-9 RS-232 copper connector and one (1) set of RX (receive) and TX (transmit) ST 100BASE-FX connectors to multimode fiber (62.5/125) @ 850 nM.

RS232-CF-01 in the Network	2
Installation	3
Operation	4
Fault Isolation and Correction	5
Cable Specifications	6
Technical Specifications	7
Compliance Information	8

RS232-CF-01 IN THE NETWORK

The RS232-CF-01 can be used to install a fiber network extension between DTEs or between a DTE and a DCE.

A straight-through cable configuration is required for installation between DTEs. A null modem cable configuration is required for installation between a DTE and a DCE. (See page 6.)

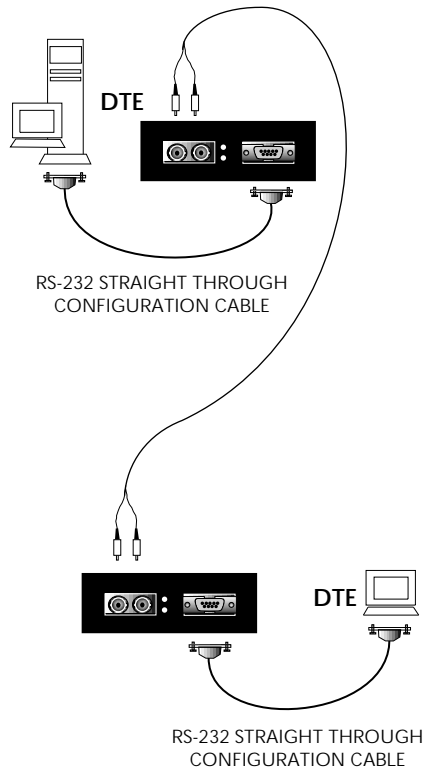

TECHNICAL SPECIFICATIONS

Standards	TIA/EIA-574	
Data Rate	1200-115,000 bits per second	
Optical Loss Budget	^a 10dB	
Case Dimensions	5.7" x 3.0" x 1.8"	(145mm x 76mm x 46mm)
Shipping Weight	3 pounds	(1.4 kilograms)
Environment	Temperature:	0-50°C (32° to 122° F)
	Humidity	10-90%, non condensing
	Altitude	0-10,000 feet


Power Supply Requirements Replace power supply with only the equivalent input rating (see below) and output rating (regulated 9VDC at 500 mA).

TN PN	Requirement	Location
3517	240 volts, 50 hertz	United Kingdom
3516	230 volts, 50 hertz	Europe
3518	120 volts, 60 hertz	USA/Canada/Mexico
3514	100 volts, 50-60 hertz	Japan
3515	240 volts, 50 hertz	Australia

Power Consumption <100mA

Warranty Lifetime

NOTE: SHIELDED CABLES REQUIRED ON DB-9 FOR EMC COMPLIANCE.

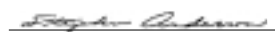TRANSITION NETWORKS		DECLARATION OF CONFORMITY
Name of Mfg:	Transition Networks 6475 City West Parkway, Minneapolis MN 55344 USA	
Model:	RS232-CF-01 Series Serial-Port Extension Media Converters	
Part Number(s):	RS232-CF-01, RS232-CF-01(SM)	
Regulation:	EMC Directive 89/336/EEC	
Purpose:	To declare that the RS232-CF-01 to which this declaration refers is in conformity with the following standards.	
	EMC-CISPR 22: 1985 Class A; EN 55022: 1988 Class A; EN 50082-1:1992; EN 60950 A4:1997; IEC 801.2, IEC 801.3, and IEC 801.4; IEC 950	
	<i>I, the undersigned, hereby declare that the equipment specified above conforms to the above Directive(s) and Standard(s).</i>	
	 Stephen Anderson, Vice-President of Engineering	July 1, 1999 Date

CABLE SPECIFICATIONS

The physical characteristics of the media cable must meet or exceed TIA/EIA-232-F (2.1.4) specifications.

Fiber Cable


MULTIMODE

Fiber Optic Cable Recommended:	62.5 / 125 μm multimode fiber
Optional:	100 / 140 μm multimode fiber 85 / 125 μm multimode fiber 50 / 125 μm multimode fiber
Fiber Optic Transmitter Power:	-28.0 dBm
Fiber Optic Receiver Sensitivity:	-38.0 dBm
Wavelength :	850nm
Bit error rate:	$\leq 10^{-9}$
Maximum Cable Distance:	2 kilometers

RS-232 Copper Cable

Gauge	24 to 22 AWG
Attenuation	20 dB/1000' @ 10 MHz
Differential Characteristic Impedance	100 $\Omega \pm 10\%$ @ 10 MHz
Maximum Cable Distance:	<15 feet

RS-232 SIGNALS

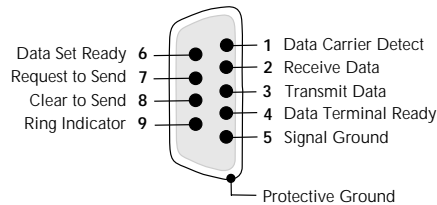

INSTALLATION



NOTE: Ensure that two (2) recessed switches located at side of media converter are set to the UP position. (Use small flatblade screwdriver or similar device to set switch position, if necessary.)

Install Cable

COPPER

NOTE: Shielded cables required on DB-9 for EMC compliance.

- Locate or build TIA/EIA-574 compliant cables with male DB-9 connectors and with straight-through cable configuration for connection to DTE and/or with null-modem cable configuration for connection to DCE. (See below.)

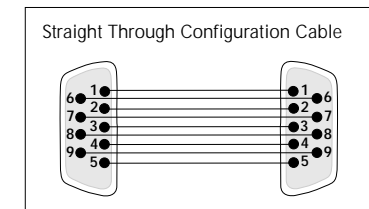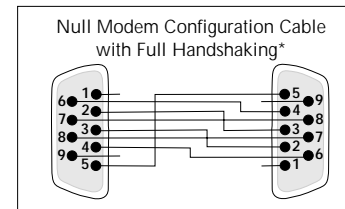

*Particular requirements for different equipment may vary.

- Connect male DB-9 connector at one end of cable to media converter female DB-9 connector.
- Connect male DB-9 connector at other end of cable to DTE female DB-9 connector (using straight-through cable configuration) or to DCE female DB-9 connector (using null-modem cable configuration).

FIBER

- Connect male **TX** and **RX** cable connectors at one end of cable to **TX** and **RX** female connectors, respectively, on media converter.

Connect to Power

- Install power adapter cord at back of media converter.
- Connect power adapter plug to AC power.
- Verify that media converter is powered by observing illuminated LED(s).

OPERATION

After installation, the media converter should function without operator intervention.


NOTE: A temporary interruption of data flow during some types of transients may require the software to recover. No operator intervention is required at media converter.

Status LEDs:

Use the status LEDs to monitor media converter operation in the network.

P(o)w(e)r Steady green LED indicates connection to external power

L(o)ck Steady green LED indicates that fiber link is in functional "lock" condition.

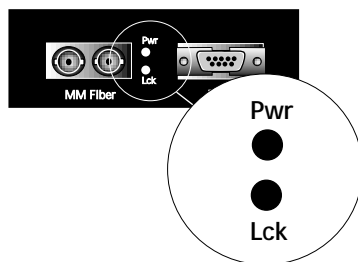

FAULT ISOLATION and CORRECTION

If the media converter fails, isolate and correct the failure by determining the answers to the following questions and then taking the indicated action:

1. Is the P(o)w(e)r LED on the media converter illuminated?

NO

- Ensure that media converter is seated firmly in E-MCC-1600 chassis?
- Contact Technical Support at (800) 260-1312/ (800) LAN-WANS.

YES

- Proceed to step 2.

2. Is the L(o)ck LED illuminated?

NO

- Check fiber cables for proper connection.
- Contact Technical Support at (800) 260-1312/ (800) LAN-WANS.

YES

- Proceed to step 3.

3. Does data fail to move across link, even though both LEDs are illuminated?

YES

- Check RS-232 cables for proper connection.
- Contact Technical Support at (800) 260-1312/ (800) LAN-WANS.